

HUMAX

User Manual

H1

 


For more information, visit www.humaxdigital.com/me

What's in the box?




H1



Remote Control / Batteries



 
AC Adaptor

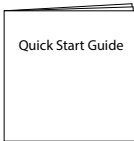

Quick start Guide

Note: Accessories may vary according to area.

 Getting to Know Your H1

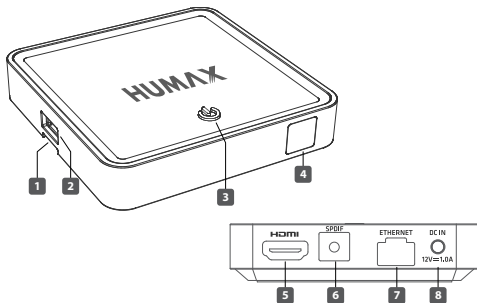


1. **Micro SD:** Connect your micro SD card.
2. **USB:** Connect your USB storage device.
3. **Standby button:** Powers on or off your H1.
4. **Status:** Lights on when your H1 is in the operation mode.
5. **HDMI:** Use an HDMI cable to connect to your TV.
6. **SPDIF:** Use an SPDIF cable to connect to the audio system.
7. **ETHERNET:** Use an Ethernet cable to connect to a wired network.
8. **DC IN:** Use an AC adaptor to connect to the power source.

Note: Connect the external hard disk drive with its own power supply.
If not, your H1 may power off.

Getting to Know Your Remote Control

 1. **POWER:** Powers on or off
2. **ARROW:** Moves the cursor up, down, left or right
3. **COLOUR:** For interactive applications
4. **Back:** Returns to the previous screen
5. **Playback Controls:** ◀◀ Rewind, ▶▶ Play or pause, ▶▶ Forward
6. **A, B:** Goes direct to frequently used Apps
7. **HOME:** Returns to the home screen
8. **OK:** Selects a menu or confirms the option
9. **Menu:** Displays the main menu

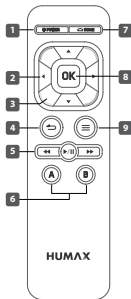


Inserting batteries


Insert the batteries matching the plus(+) and minus(-) at each end.

Important notice

 The batteries of your remote control are 2 x AAA type, 1,5VDC. Do not mix different types of batteries or new and old batteries. Do not use rechargeable batteries. In order to avoid any risk of explosion, observe polarities indicated inside the battery compartment. Replace only with the type of batteries specified above. Do not subject to excess heat such as SUN and Fire, do not recharge them. If you are not using the remote control for a long period of time, remove the batteries. Please respect the environment and prevailing regulations! Batteries must be collected separately from other refuse! Before you dispose of batteries, ask your dealer whether they are subject to special recycling and if he will accept them for disposal.

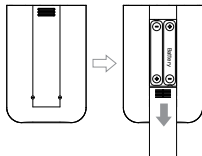

Connecting Your H1

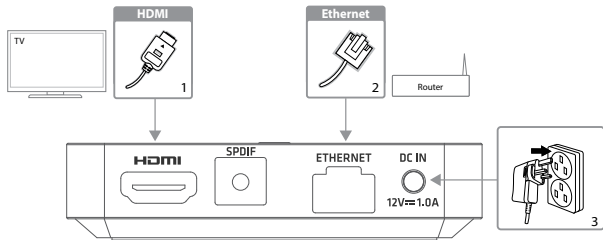 

1. Connecting to your TV

Use an HDMI cable (not supplied) to connect to your TV.

2. Connecting to Internet

Use an Ethernet cable (not supplied) to connect to your router.

Note: Wireless network can be connected.

3. Powering On

Use an AC adaptor to DC IN of your H1, and then plug it into a wall outlet.

Setting Up Your H1

When you power on your H1 for the first time, follow the instructions to set it up. Press **STANDBY** button on your H1 or the remote control to power it on.

1. Language

Select your language.

2. Internet Connection

Your H1 will automatically detect your wired network connection.

If your H1 fails to connect to the network, follow the on-screen instructions to set up the wireless network.

Select your network from the network list and enter your network password. Network passwords are case sensitive.

3. Time Zone

Select your region.

4. Result

You have finished the setup.

Getting Your HUMAX Playmote

You can use your mobile phone as a remote control from anywhere in your home.

1. Go to Google Play or App Store to download HUMAX Playmote.
2. Search by keyword **HUMAX**.
3. Download and install the HUMAX Playmote on your mobile phone.



Android



iOS



Pairing with your H1

Make sure that your H1 and mobile phone should be connected to the same network. When you install the HUMAX Playmote for the first time, your mobile phone scans your H1. The PIN code appears on your TV. Enter the PIN code on your mobile phone to pair with your H1.

Note: Tap **Device Scan** on your mobile phone if the PIN code does not appear on your TV.

Browsing home screen

You can browse home screen with a remote control or your mobile device with Playmote.

Category	Description
Recently	Your recently used menu or apps Up to 18 apps can be displayed.
Recommended	Apps recommended by HUMAX You cannot delete apps from the recommended list.
HUMAX plus+	You can search and download apps from app stores.
All Apps	All apps installed in your product
Settings	You can access Settings to update software, set up the network connection and manage your product and more.

Wireless Display

You can wirelessly display your mobile device's screen on your TV through your product.

Make sure that all devices are connected to the same network.

1. Press the **HOME** button.
2. Go to **HUMAX plus+** and select **Wireless Display**.

On your mobile device

1. Select **Display > Wireless Display** from the settings menu and set it to ON.
2. Select **SEARCH FOR DISPLAY**.
3. Select **Android_dd97** on your mobile device to connect to the wireless display. The screen on your mobile device will appear on your TV.

Note:

- You can use wireless display function and Playmote app at the same time only when they are on the same wireless network.
- You cannot use this function on iOS devices.

Playing media contents

You can play video, music, photo files from the connected storage devices or home network devices on your TV. Make sure that the USB storage device or network is connected correctly.

1. Press the **HOME** button.
2. Go to **HUMAX plus+** and select **HUMAX Media Player**.
3. Select **VIDEO, MUSIC, PHOTO**.
Press the **MENU** button to set options.
4. Select a file to play.

To play files from the DLNA devices

1. Select **DLNA**.
2. Select the DLNA devices.
3. Select a file to play.

To play files from the network server

1. Select **NETWORK**.
2. Select **Add network storage**.
Enter the ID and password of the server to access the shared folder.
3. Select a file to play.

Downloading apps from HUMAX plus+

You can browse and download the applications supported by HUMAX. HUMAX Apps and Kids Apps are provided for free.

1. Press the **HOME** button.
2. Go to **HUMAX plus+**.
3. Select **HUMAX Apps** or **Kids Apps**.
4. Select an application to download.
5. Select **Yes**. You can find the applications in **All Apps** category.

To uninstall applications

1. Go to **Settings**.
2. Select **Apps**.
3. Select the app to uninstall and select **Uninstall**.
4. Select **OK**.

To edit applications

You can move or delete the apps from **All Apps** or **HUMAX plus+**.

1. Press the **HOME** button.
2. Go to **All apps** or **HUMAX plus+**.
3. Press the **MENU** button to enter the editing mode.
4. Select the app to move or delete and press the **OK** button.

To assign shortcuts

You can assign a hotkey for your favourite app to button **A** or **B** on the remote control.

1. Select your favourite app.
2. Long press button **A** or **B** on the app to make it work with a hotkey.
3. The confirmation message will display.

Troubleshooting

Before contacting your local service center, read the tips below carefully. If the problem persists after completing the following procedure, contact your local product distributor or service center for further instructions.

Power

H1 does not power on.

- Check the AC power adaptor and make sure it is plugged in to a wall outlet.
- Check your batteries in your remote control.

Picture

No or poor picture

- Make sure your H1 is powered on and in operation mode.
- Make sure an HDMI cable is firmly connected to the TV.
- Check the brightness level of the TV.

Sound

No or poor sound

- Check an HDMI cable or S/PDIF cable is connected correctly.
- Check the volume levels of your TV.
- If your H1 is connected to the digital audio device with an SPDIF cable, check the digital audio device is turned on.

Remote Control

Remote control does not work.

- Check new batteries are properly inserted in the remote control.
- Remove and reinsert the batteries in the remote control.

HUMAX Playmote does not work.

- Check your mobile phone and H1 are connected to the same network.
- Check your HUMAX Playmote is paired with your H1.
- Check the Ethernet cable is connected to the wireless router.
- Avoid metal, brick wall or concrete obstructions between your H1 and the wireless router.

Network

Wired network is not connected.

- Check the Ethernet cable is connected to your H1.
- Check the network settings are properly set up.

Wireless network is not connected.

- Check the correct wireless network is selected.
- To set up the wireless network, go to **HOME > Settings > Wireless LAN**.
Select the wireless network and enter the PIN code. If your wireless network is not listed, select **Add Network**.

Specification

- **Power Type:** External Adaptor
- **Input Voltage:** 100V – 240V ~ 50/60Hz
- **Power Consumption:** 12V $\overline{\text{---}}$ 1.0A
- **Protection:** Separate Internal Fuse & Lightning protection
- **Size (WxDxH):** 88 x 88 x 20 (mm)
- **Weight:** 87g
- **Operating Temperature:** 0°C ~ 40°C

HUMAX Customer Support

More information on your product is provided in the HUMAX website. Should your product require warranty service, please contact the following to obtain the appropriate authorization.

Middle East (Dubai, UAE)	E-mail: Website: Language:	callcenterME@humaxdigital.com http://www.humaxdigital.com/me/support Arabic / English
-----------------------------	----------------------------------	--

Note: For hardware repair, please visit our website. You can download the user manual from HUMAX website.

Safety Instructions

Read the safety instructions before using your product to avoid electrical shock or personal injury.

- Do not bend or twist the power cord to avoid damage of the power cord.
- Do not touch the power plug with wet hands to avoid electrical shock.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus that produce heat.
- Do not place naked flame sources, such as lighted candles, on or near the apparatus.
- Use only the cables provided with your product.
- Do not attempt to repair or disassemble your product yourself, as this will void the warranty.
- Before removing your product from your TV, unplug the power source and let it cool as it may get hot to touch.

Trademarks

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby.
- HDMI, the HDMI Logo, and High-Definition Multimedia interface are trademarks and registered trademarks of HDMI Licensing LLC.



Warranty Certificate

IMPORTANT:

Keep this Certificate together with the Original invoice or receipt in a safe place and show them to the retailer or place of purchase whenever a warranty repair is necessary.

- Model No.: _____

- Serial No.: _____

- Date of Purchase: _____

- Dealer's Signature: _____

- Customer's Signature: _____

HUMAX thanks you for your recent HUMAX product purchase.

For your benefit, we recommend that you record your serial number, found on the product, and other purchase information on this card and keep it with your personal records, along with proof of purchase. This information will allow us to better serve your needs.

- **WARRANTY CONDITIONS**

Keep this Certificate together with the original invoice or receipt in a safe place and show them to the retailer or place of purchase whenever a warranty repair is necessary.

- **HUMAX CONSUMER WARRANTY**

HUMAX warrants this product to be free of defects in materials and workmanship, subject to the conditions set forth overleaf.

• CONDITIONS

1. The HUMAX Warranty is valid for a period of one year from the date of first purchase.
2. In the event that this product fails to function properly during the warranty period, the retailer or distributor will make this product capable of operating for the purpose of which it was designed, without charging for labour and parts.
3. This warranty will be honoured only if the Warranty Certificate has been duly completed by the purchaser and is presented to the retailer with the original invoice or receipt.
4. This warranty does not cover shipping or transportation charges from you to us.
5. The obligations of the distributor are limited to the repair of defect parts. Costs and risks of transport to the retailer as well as removal and installation of the product, and any other costs directly or indirectly related to its repair, are not covered by the warranty.
6. All warranty repairs performed by non-authorized repair shops will not be reimbursed and if such repairs damage this product such damage will not be covered by this warranty.
7. This warranty is not applicable in cases other than defects in materials or workmanship and, in particular, does not cover:
 - a. periodic check-ups, adjustments, maintenance or conversions as well as replacement of parts due to normal wear and tear;
 - b. damage caused by accidents, negligence, modifications, use of non-HUMAX parts, improper use, installation or package;
 - c. damage caused by lightning, water, fire, acts of war, public disturbances, incorrect-mains voltages, incorrect ventilation or any other cause beyond the control of the distributor;
 - d. products where the label bearing the serial number has been removed, defaced or is illegible.
8. This warranty is offered to any person who has legally obtained possession of this product within the warranty period.
9. HUMAX's maximum liability shall not exceed the actual purchase price paid by you for the product. In no event shall HUMAX be liable for special, incidental, consequential or indirect damages.

HUMAX